



Combine Installation Overview

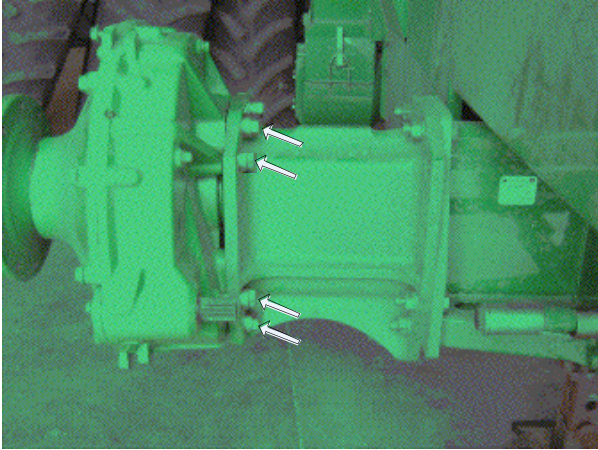

Remove wheel, drive shaft & front mounting bolts

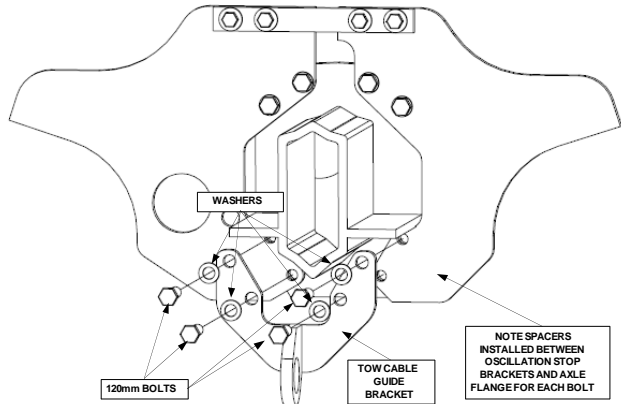

Install front oscillation stop, rear oscillation stop, & tow guide bracket



Install adaptor plate to axle hub



Mount module to adaptor plate